// Retail Price List & Product Info Guide





DUAL

SHADES

Effective February 3, 2020

design simplified

TABLE OF CONTENTS

Product Overview	
Features & Benefits	
Collection Information	
Color Chart	6
Pricing Groups	
• Pricing Group 1-5	7-8
Motorization Surcharges and Options	
Product Specifications	
Product Specifications	
• Finished Dimensions	
Simplicity Rechargeable Motorization	
PowerWand Motorization	
• RemoteLift™ Motorization	
Quick Motorization Programming Guide	
Product Components	18-20



FEATURES & BENEFITS



- · A soft shade that combines the light control of a blind with the soft beauty of a fabric shade.
- Uniquely designed fabric has alternating bands of sheer or mesh fabric with translucent or room darkening solid fabric within the same shade.
- The bands of fabric can be aligned or offset providing total light and privacy control as well as UV protection.
- Large selection of decorative styles in a wide ranging color palette to blend with any décor.
- A matching fabric insert in the headrail is standard and provides a finished look.
- Innovative bottomrail allows the fabric to slide through for precise positioning.
- · Continuous cord loop is standard.
- · Choose from three motorization options:
- Simplicity Rechargeable great option for those hard to reach places. Rechargeable battery eliminates the external battery wand.

3

- PowerWand low cost, rechargeable motorized system raises and lowers at the touch of a button on the wand.
- RemoteLift trouble free operation at the touch of a button.
- · Smoove 1 RTS surface mounted wall switch option now available.
- myLink RTS Interface now available.
- · Limited Lifetime Warranty ensures your customers' satisfaction.

COLLECTION INFORMATION

	Continuous Cord Loop
Minimum Width (NET)	15"
Minimum Height	24"

	Simplicity Rechargeable
Minimum Width (NET)	19"
Minimum Height	20"

	RemoteLift
Minimum Width (NET)	18"
Minimum Height	24"

	PowerWand
Minimum Width (NET)	21"
Minimum Height	20"

Maximum widths and heights for continuous cord loop and battery operated motorization noted below.

Pattern Name	Family Code	Band Height	Fabric Composition	Opacity	Maximum Width	Maximum Height	Price Group
Advance	DS1	3"	100% Woven Polyester	Translucent	94"	120"	4
Anastasia	DS2	3"	100% Polyester	Translucent	100"	120"	4
Beaumont	DS3	3"	100% Polyester	Translucent	96"	120"	1
Cinema	DS4	2.75"	85% Polyester / 15% Linen	Translucent	92"	120"	3
Definition	DS6	3"	100% Polyester	Room Darkening	90"	120"	5
Diversion	DS21	4.625"	100% Polyester	Room Darkening	102"	120"	5
Epicure	DS7	3"	100% Polyester	Translucent	100"	120"	3
Extravagance	DS8	5.5"	100% Polyester	Translucent	100"	120"	4
Glorious	DS18	4.75"	100% Polyester	Translucent	90"	120"	2
Humber	DS19	3"	100% Polyester	Translucent	102"	120"	2
Impulse	DS20	3"	100% Polyester	Translucent	90"	96"	2
Luxury	DS10	3"	100% Polyester	Translucent	100"	120"	4
Nomad	DS12	3"	100% Polyester	Translucent	102"	100"	3
Obscure	DS13	4"	100% Polyester	Room Darkening	96"	100"	5
Palladian	DS14	3"	100% Polyester	Translucent	100"	120"	3
Reveal	DS15	2.75"	100% Polyester	Translucent	102"	120"	2
Strande	DS16	2.75"	100% Polyester	Translucent	100"	120"	2
Sublime	DS17	3"	100% Polyester	Translucent	90"	100"	2

SIDE-BY-SIDE VANE ALIGNMENT

When Dual Shades are installed side by side, vane alignment can be guaranteed within 3/8" only if:

- Shades are ordered at the same time and are identical style, color and height.
- Shades that need to be aligned are specified on the order form (a note must be included in Special Instructions).

ORDERING NOTE

4

- Finished blind height will always be in the full privacy position with bands offset
- When you align bands to the view through position, the bottom rail will raise slightly off the window sill the gap between the sill and bottomrail is approximately 1/2 the band width.

COLLECTION INFORMATION – 2 ON 1 HEADRAIL

Minimum Width Per Panel:

- Continuous Cord Loop 15" NET
- 2 on 1 is not available with any Motorization System
- Center Gap 1/2"

Minimum Height:

• All Styles - 24"

Minimum widths and heights for continuous cord loop noted below.

Pattern Name	Family Code	Minimum Width per panel	Maximum Overall Width	Maximum Height
Advance	DS1	15" Net	94"	90"
Anastasia	DS2	15" Net	106"	90"
Beaumont	DS3	15" Net	96"	90"
Cinema	DS4	15" Net	92"	90"
Definition	DS6	15" Net	106"	90"
Diversion	DS21	15" Net	106"	90"
Epicure	DS7	15" Net	106"	90"
Extravagance	DS8	15" Net	108"	90"
Glorious	DS18	15" Net	106"	90"
Humber	DS19	15" Net	106"	90"
Impulse	DS20	15" Net	106"	90"
Luxury	DS10	15" Net	108"	90"
Nomad	DS12	15" Net	106"	90"
Obscure	DS13	15" Net	96"	90"
Palladian	DS14	15" Net	106"	90"
Reveal	DS15	15" Net	108"	90"
Strande	DS16	15" Net	106"	90"
Sublime	DS17	15" Net	108"	90"

2-on-1 is not available with RemoteLift, Simplicity Rechargeable, or PowerWand motorization

SIDE-BY-SIDE VANE ALIGNMENT

When Dual Shades are installed side by side, vane alignment can be guaranteed within 3/8" only if:

- Shades are ordered at the same time and are identical style, color and height.
- Shades that need to be aligned are specified on the order form (a note must be included in Special Instructions).

ORDERING NOTE

5

- Finished blind height will always be in the full privacy position with bands offset
- When you align bands to the view through position, the bottom rail will raise slightly off the window sill the gap between the sill and bottomrail is approximately 1/2 the band width.

COLOR CHART

Material Name	Color Name	Color#	Cassette Color		
Advance	Anthracite	DS1-3310	Black		
Advance	Cognac	DS1-3308	Dark Brown		
Advance	Haze	DS1-3305	Black		
Advance	Mist	DS1-3301	Silver		
Anastasia	Cream	DS2-2302	Beige		
Anastasia	Honey	DS2-2303	Beige		
Anastasia	Ice	DS2-2301	White		
Beaumont	Black	DS3-2413	Black		
Beaumont	Bone	DS3-2402	Beige		
Beaumont	Café	DS3-2420	Dark Brown		
Beaumont	Eggplant	DS3-2429	Black		
Beaumont	Linen	DS3-2412	Beige		
Beaumont	Mushroom	DS3-2419	Dark Brown		
Beaumont	Pewter	DS3-2407	Silver		
Beaumont	Raffia	DS3-2423	Beige		
Beaumont	Silver	DS3-2416	Silver		
Beaumont	Steel	DS3-2414	Black		
Beaumont	White	DS3-2401	White		
Cinema	Bamboo	DS4-5104	Beige		
Cinema	Ecru	DS4-5103	Beige		
Cinema	Granite	DS4-5125	Silver		
Cinema	Linen	DS4-5122	Beige		
Cinema	Mesa	DS4-5124	Dark Brown		
Definition	Arctic	DS6-2550	Silver		
Definition	Charcoal	DS6-2505	Black		
Definition	Dusk	DS6-2503	Silver		
Definition	Fawn	DS6-2501	Beige		
Definition	Gunmetal	DS6-2504	Silver		
Definition	Sable	DS6-2502	Dark Brown		
Diversion	Arctic	DS21-6520	Silver		
Diversion	lvory	DS21-6521	Silver		
Diversion	Fawn	DS21-6522	Beige		
Diversion	Sable	DS21-6523	Dark Brown		
Diversion	Dusk	DS21-6524	Silver		
Diversion	Gunmetal	DS21-6525	Silver		
Diversion	Charcoal	DS21-6526	Black		
Epicure	Coffee	DS7-9708	Dark Brown		
Epicure	Opal	DS7-9702	White		
Epicure	Quartz	DS7-9701	White		
Epicure	Sambuca	DS7-9713	Black		
Epicure	Storm	DS7-9710	Silver		
Epicure	Taupe	DS7-9704	Dark Brown		

Material Name	Color Name	Color #	Cassette Color		
Extravagance	Caraway	DS8-2605	Beige		
Extravagance	Dove	DS8-2603	Silver		
Extravagance	Horizon	DS8-2606	White		
Extravagance	Opal	DS8-2602	Beige		
Extravagance	Quartz	DS8-2601	White		
Glorious	Snow	DS18-6210	White		
Glorious	Canvas	DS18-6211	Beige		
Glorious	Malt	DS18-6212	Dark Brown		
Glorious	Greystone	DS18-6213	Silver		
Glorious	Sable	DS18-6214	Dark Brown		
Humber	Glacier	DS19-6300	Silver		
Humber	Barley	DS19-6301	Beige		
Humber	Pewter	DS19-6302	Black		
Humber	Midnight	DS19-6304	Black		
Impulse	Aztec	DS20-6411	Dark Brown		
Impulse	Onyx	DS20-6413	Black		
Luxury	Caraway	DS10-2805	Beige		
Luxury	Dove	DS10-2803	Silver		
Luxury	Honey	DS10-2804	Beige		
Luxury	Horizon	DS10-2806	White		
Luxury	Opal	DS10-2802	Beige		
Luxury	Quartz	DS10-2801	White		
Nomad	Coffee	DS12-5104	Dark Brown		
Nomad	Flannel	DS12-5101	Silver		
Nomad	Midnight	DS12-5103	Black		
Nomad	Stucco	DS12-5102	White		
Obscure	Acorn	DS13-2902	Dark Brown		
Obscure	Barley	DS13-2907	Beige		
Obscure	Bleach	DS13-2901	White		
Obscure	Hickory	DS13-2905	Dark Brown		
Obscure	Truffle	DS13-2909	Dark Brown		
Palladian	Cognac	DS14-0908	Dark Brown		
Palladian	Fawn	DS14-0904	Dark Brown		
Palladian	Glacier	DS14-0901	White		
Palladian	lvory	DS14-0902	White		
Palladian	Shadow	DS14-0910	Silver		
Reveal	Beeswax	DS15-8601	Dark Brown		
Reveal	Espresso	DS15-8608	Dark Brown		
Reveal	Natural	DS15-8602	Beige		
Reveal	Sand	DS15-8604	Beige		
Reveal	Teak	DS15-8607	Dark Brown		
Strande	Canyon	DS16-3102	Beige		
Strande	Coconut	DS16-3101	White		
Strande	Espresso	DS16-3104	Dark Brown		
Strande	Java	DS16-3103	Dark Brown		
Sublime	Ice	DS17-6100	White		
Sublime	Opal	DS17-6101	Beige		
Sublime	Silver	DS17-6102	Silver		
Sublime	Charcoal	DS17-6103	Black		
Sublime	Coffee	DS17-6104	Dark Brown		
Sublime	Raven	DS17-6105	Black		

Effective 2/3/20

6



GROUP 1 · Beaumont (96")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"
HEIGHT TO:													
40"	\$364	404	451	489	529	569	616	655	704	755	789	827	908
50"	377	421	469	510	554	598	649	689	742	797	831	875	960
60"	389	437	489	533	579	626	678	725	782	839	878	923	1012
70"	400	452	505	556	605	652	711	759	818	882	922	972	1064
80"	414	469	524	578	631	684	744	795	859	922	969	1020	1115
90"	426	484	543	599	655	711	775	830	897	963	1015	1068	1167
100"	438	499	564	622	683	742	808	866	935	1007	1056	1116	1217
110"	452	517	583	646	708	769	841	901	974	1049	1103	1167	1268
120"	464	531	602	669	732	799	873	936	1012	1089	1148	1213	1321

GROUP 2

• Glorious (90") • Humber (102") • Impulse (90") • Reveal (102") • Strande (100") • Sublime (90")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"	102"
HEIGHT TO:														
40"	\$429	484	540	592	642	694	754	803	868	930	975	1026	1121	1155
50"	450	508	569	626	683	738	803	859	927	996	1044	1101	1203	1241
60"	470	532	600	661	723	785	855	915	988	1061	1116	1175	1283	1325
70"	489	557	630	695	763	828	904	972	1048	1127	1187	1251	1364	1410
80"	509	583	660	732	803	875	955	1027	1108	1194	1257	1329	1448	1493
90"	528	608	689	766	844	922	1006	1080	1169	1258	1329	1405	1528	1578
100"	550	633	719	802	883	965	1058	1139	1230	1325	1402	1482	1611	1664
110"	567	657	750	836	925	1011	1107	1192	1291	1390	1471	1558	1691	1749
120"	588	683	779	870	964	1056	1155	1248	1350	1457	1542	1631	1772	1833

GROUP 3

· Cinema (92") · Epicure (100") · Nomad (102") · Palladian (100")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"	102"
HEIGHT TO:														
40"	\$446	504	564	618	675	730	795	850	915	983	1032	1086	1188	1224
50"	470	532	599	660	721	785	855	912	984	1061	1115	1175	1283	1324
60"	493	561	635	700	769	836	911	978	1058	1139	1198	1265	1378	1421
70"	514	589	669	742	817	888	972	1042	1127	1215	1281	1353	1473	1521
80"	538	618	706	785	863	941	1031	1110	1200	1291	1362	1443	1568	1620
90"	561	647	738	823	909	994	1091	1174	1270	1368	1445	1530	1664	1720
100"	585	679	774	865	958	1048	1149	1240	1341	1445	1530	1620	1758	1818
110"	608	707	808	906	1003	1102	1206	1305	1412	1523	1614	1707	1853	1916
120"	630	736	844	947	1049	1154	1267	1368	1482	1599	1696	1799	1947	2015

OPTIONS: NO CHARGE - SPECIFY ON ORDER

- 2 on 1 Headrail (price as two separate shades)
- Non-wrapped bottomrail option (fabric-wrapped bottomrail standard)
- · Hold-Down Brackets
- Metal Bead Chain Option
 (Please note: when metal bead chain option is selected, the
 tensioner color will coordinate with the cassette headrail color.
 If the cassette headrail is silver, the tensioner will be white)



GROUP 4

· Advance (94") · Anastasia (100") · Extravagance (100") · Luxury (100")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"	100"
HEIGHT TO:														
40"	\$480	547	617	680	745	808	880	946	1018	1097	1154	1217	1329	1373
50"	509	583	661	733	804	877	959	1031	1113	1198	1264	1335	1453	1498
60"	540	622	707	787	868	947	1036	1115	1205	1300	1373	1452	1577	1629
70"	569	659	754	840	928	1016	1113	1200	1300	1398	1481	1566	1701	1758
80"	600	697	798	894	989	1086	1191	1286	1391	1498	1588	1683	1827	1889
90"	630	736	844	947	1049	1154	1267	1372	1485	1600	1696	1800	1948	2018
100"	660	773	892	1002	1113	1224	1345	1455	1577	1701	1805	1916	2074	2147
110"	690	809	935	1054	1174	1293	1420	1540	1668	1802	1913	2032	2199	2277
120"	719	850	982	1108	1235	1362	1497	1624	1762	1903	2020	2150	2321	2405

GROUP 5

• Definition (90") • Diversion (102") • Obscure (96")

WIDTH TO:	24"	30"	36"	42"	48"	54"	60"	66"	72"	76"	84"	90"	96"	102"
HEIGHT TO:														
40"	\$523	597	678	750	823	896	978	1049	1134	1220	1284	1355	1479	1526
50"	559	642	730	811	896	978	1068	1151	1243	1339	1415	1495	1626	1681
60"	595	688	785	877	969	1060	1160	1251	1354	1460	1544	1634	1775	1835
70"	631	733	840	941	1042	1144	1254	1352	1464	1578	1672	1772	1923	1990
80"	666	778	896	1004	1116	1226	1345	1454	1574	1700	1802	1913	2071	2143
90"	702	823	949	1068	1188	1307	1438	1557	1687	1820	1932	2049	2218	2298
100"	738	868	1004	1131	1263	1392	1530	1658	1797	1941	2061	2189	2367	2454
110"	774	915	1059	1197	1336	1474	1620	1758	1909	2060	2190	2328	2516	2607
120"	809	959	1113	1262	1407	1557	1713	1858	2018	2179	2318	2466	2664	2761

OPTIONS: NO CHARGE – SPECIFY ON ORDER

- 2 on 1 Headrail (price as two separate shades)
- Non-wrapped bottomrail option (fabric-wrapped bottomrail standard)
- · Hold-Down Brackets
- Metal Bead Chain Option

(Please note: when metal bead chain option is selected, the tensioner color will coordinate with the cassette headrail color. If the cassette headrail is silver, the tensioner will be white)

See page 9 for motorization surcharges

8



SIMPLICITY RECHARGEABLE AND POWERWAND OPTIONS: EXTRA CHARGE – SPECIFY ON ORDER

USE APPROPRIATE DUAL SHADE GRID FOR SHADE PRICE, THEN ADD EXTRA CHARGE(S) BELOW.

- - ***Motor is only available on the right side for Simplicity Rechargeable
- PowerWandadd \$190 per shading
 - PowerWand Options (must be specified):
 - 1) Control Side (Left or Right)
 - 2) Wand Color (Black or White)
 - 3) Wand Length:
 - 1 foot (12")
 - 2 feet (24")
 - 3 feet (36")
 - 4 feet (48")
 - 5 feet (60")

REMOTELIFT OPTIONS: EXTRA CHARGE – SPECIFY ON ORDER (Must select RemoteLift power source* when ordering) USE APPROPRIATE DUAL SHADE GRID FOR SHADE PRICE, THEN ADD REMOTELIFT EXTRA CHARGE(S) BELOW. ***MOTOR IS ONLY AVAILABLE ON THE RIGHT SIDE FOR REMOTELIFT.

- Padia Fraguenay (PE) Remotal ift Materization Ungrade		add \$520 per abada
Radio Frequency (RF) RemoteLift Motorization Upgrade Radio Frequency (RF) Remote Control – 1 Channel	Dow! #DC445060	auu \$520 per Silaue
Radio Frequency (RF) Remote Control – 5 Channel Radio Frequency (RF) Remote		
Radio Frequency (RF) Remote Control – 16 Channel ** available as a separate part order only**		
Radio Frequency (RF) Remote Control – Telis Modulis 1 Channel		
Radio Frequency (RF) Remote Control – Telis Modulis 5 Channel		
Radio Frequency (RF) Wireless Wall Switch – 1 Channel	Part #1810897	add \$422 each
Radio Frequency (RF) Wireless Wall Switch – 5 Channel	Part #1810813	add \$422 each
Radio Frequency (RF) Programmable Timer – 1 Channel	Part #1805237A	add \$671 each
RTS – Smoove 1 RTS	Part #1811533	add \$218 each
RTS – myLink RTS interface	Part #1811403	add \$626 each
- Padia Fraguenay (PE) Poloadable Single Pottery Wand**	Dort #DC445269	add \$225 acab
Radio Frequency (RF) Reloadable Single Battery Wand** Dadio Frequency (RF) Reloadable Single Battery Wand** Dadio Frequency (RF) Reloadable Single Battery Wand**		
Radio Frequency (RF) Reloadable Dual Battery Wand**		
Dual Wand Y Harness (required)		
Radio Frequency (RF) Transformer		
Radio Frequency (RF) Battery Wand Extension Wire – 10"		
Radio Frequency (RF) Battery Wand Extension Wire – 48"		
Radio Frequency (RF) Battery Wand Extension Wire – 96"	Part #9018624	add \$30 each
Radio Frequency (RF) Lithium Batteries (Reloadable Wand – 8 each)	Part #9014834	add \$75 each
Solar Recharge Kit (batteries NOT included)	Part #9019034	add \$414 each
(Includes solar panel, 10" Y harness, 12v reloadable battery tube, tube mounting clips, glass mount adhe		
NiMh Rechargeable Batteries (quantity of 10)		
Plug-in AC Battery Rapid Charger (for solar recharge kit only) (includes 12" cable)		
48" Extension Cable for Y Harness	Part #9016374	add \$27 each

Notes: * RemoteLift power source options: Reloadable Single Battery Wand, Reloadable Dual Battery Wand, and Transformer (plugs into standard wall outlet)

When ordering multiple motorized shades/remotes, please provide programming instructions. Otherwise, all shades will be programmed to one remote.

^{**} Each Reloadable Battery Wand comes with a set of 8 AA lithium batteries on initial shade orders. The part numbers above reference the battery wands only. The part # for replacement pack of 8 AA lithium batteries is #9014834.

PRODUCT SPECIFICATIONS

Cassette Measurement

• 3-5/8" wide x 3" high



Mounting Requirements

Inside Mount

- Minimum shallow mounting surface: 1-1/2"
- Minimum flush inside mounting including brackets for cassette: 3-3/4"

Outside Mount

• Minimum outside mount surface: 1-1/2"


Hardware Colors

Cassette available in white, beige, black, dark brown and anodized silver.

- A matching fabric insert in headrail is a standard feature **Please Note:** on certain fabrics with narrower bands, the fabric insert will feature both the solid fabric and the sheer.
- Fabric-wrapped bottomrail is a standard feature (non-wrapped bottomrail optional)
- · Universal metal bracket will be supplied
- · Cord loops and tensioners are color-coordinated



Metal Chain optional in the following colors: White, Black,
 Antique Brass, Oil Rubbed Bronze, Stainless Steel, and Nickel
 (Please note: when metal bead chain option is selected, the
 tensioner color will coordinate with the cassette headrail color.
 If the cassette headrail is silver, the tensioner will be white)

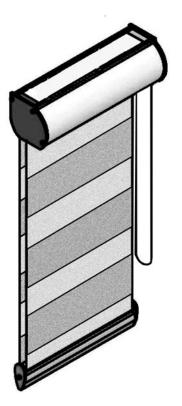

Cord Loop, Metal Beaded Chain Lengths

SHADE HEIGHT	LOOP DROP
24" - 39 7/8"	24" loop
40" - 59 7/8"	36" loop
60" - 83 7/8"	48" loop
84" - 107 7/8"	60" loop
108" - 120"	72" loop

Please Note: Environmental conditions, such as heat, humidity, etc., may result in light bowing, puckering and dimpling of the fabric which is considered normal. Some fabrics may lightly fray which is considered normal and within specifications.

FINISHED DIMENSIONS

	Continuous Cord Loop	RemoteLift	Simplicity Rechargeable	PowerWand
		INSIDE	MOUNT	
Cassette width	minus 1/4"	minus 1/4"	minus 1/8"	minus 1/8"
Tube Width	minus 1-1/8"	minus 1-1/8"	minus 1"	minus 1"
Fabric width	minus 1-1/4"	minus 1-1/4"	minus 1-1/8"	minus 1-1/8"
Bottom rail outer width	minus 1-3/16"	minus 1-3/16"	minus 1-1/16"	minus 1-1/16"
Bottom rail inner width	minus 1-3/8"	minus 1-3/8"	minus 1-1/4"	minus 1-1/4"

Deductions noted are taken from Ordered Width

	Continuous Cord Loop	RemoteLift	Simplicity Rechargeable	PowerWand				
		OUTSIDE MOUNT						
Cassette width	ordered width	ordered width	ordered width	ordered width				
Tube Width	minus 7/8"	minus 7/8"	minus 7/8"	minus 7/8"				
Fabric width	minus 1"	minus 1"	minus 1"	minus 1"				
Bottom rail outer width	minus 5/16"	minus 5/16"	minus 5/16"	minus 5/16"				
Bottom rail inner width	minus 1-1/8"	minus 1-1/8"	minus 1-1/8"	minus 1-1/8"				


Deductions noted are taken from **Ordered Width** For IB and OB, Shade Height is **Ordered Height**

	Continuous Cord Loop	RemoteLift	Simplicity Rechargeable	PowerWand
Minimum Width (NET)	15"	18"	19"	21"
Minimum Height	24"	24"	20"	20"

SIMPLICITY RECHARGEABLE MOTORIZATION: OVERVIEW

Simplicity Rechargeable

 • The Rechargeable Simplicity motor program features an integrated rechargeable lithium ion battery in the motor casing and is fully concealed by the inner tube.





Battery Charger

• An 8.4 Volt charger requires a standard power outlet to recharge the battery. The charger must be specified when ordering Simplicity Rechargeable Motorized shade option. The charger plugs into the charging port of the motor. The charger is black and comes with a 156" wire. The dimensions are 1" wide x 2-1/2" length x 1-3/4" deep. Sold separately.



Solar Panel Recharge Option

 Plugs in to any Simplicity Rechargeable motorized shading (does not work with PowerWand). Provides constant trickle charge to 7.4v Li-ION

Rechargeable battery packs. Does not require direct sunlight, but performs best in regular direct sunlight applications. Will prolong the life of the charge of the 7.4v rechargeable battery packs, and in some applications will maintain charge indefinitely.



 Life of charge is subject to application variables such as, size and weight of shade, frequency of use, amount of direct sunlight exposure, etc.

5 Channel Remote

 The remote can operate up to five shadings simultaneously, individually or in groups. Remotes and holders are available in white or black. The remote comes with a holder which can be mounted to a wall for easy storage. The range of the remote is approximately 80 feet.



Please Note:

- Motor is only available on the right side.
- Not all motors run at the same rate of speed.
- Simplicity motors have a "Favorites" position setting. To set a "Favorites" position, follow instructions provided in the installation instructions.

POWERWAND MOTORIZATION: OVERVIEW

PowerWand™ Motorization

Dual Shades can be fabricated with the PowerWand Rechargeable Push Button Control option.
 The PowerWand Rechargeable option is an easy, cord free motorized operation for the budget savvy homeowner. PowerWand Rechargeable uses Simplicity motors and components.

PowerWand Rechargeable Shades Operation

- Press the up or down button on the pendant to raise or lower the shading to your desired position. No programming is required with PowerWand as upper and lower limits are set at the factory. If desired, upper and lower limits can be adjusted in the field.
- Please refer to the installation instructions for instructions on resetting the upper and lower limits and setting a favorites position can be programmed on-site.

PowerWand Appearance

- The PowerWand Rechargeable wand and pendant is attached to the head rail and requires no additional mounting.
- The wand and pendant hangs down the front of the shades from the head rail.
- Pendant is 2-1/2" long.
- The pendant does not need to be mounted to the wall to operate the shade.

PowerWand Options

- Wand is available in Black or White (there is no default)
- Wand is available in 1 foot increments from 1 to 5 feet (there is no default)
- Wand is available on either the right or left side of the shade (there is no default)





Wand

Plug-In Charger

PowerWand Battery Life

• The battery life will vary based on the type of window covering selected, the size and weight of the window covering and the number of times you operate the blind on a daily basis.

Battery Charger

• 8.4 Volt charger requires a standard power outlet to recharge the battery. The charger must be specified when ordering the PowerWand motorization option. The charger plugs into the charger port on the side of the pendant. The charger is black and comes with a 156" wire. The dimensions are 1" wide x 2-1/2" length x 1-3/4" deep.



REMOTELIFT™ MOTORIZATION: OVERVIEW

With RemoteLift™ motorized shades, enjoy a better quality of life and have more time to enjoy life's daily pleasures. At the touch of a button, window coverings can be instantly adjusted to changing activities or the varying sun conditions.



An ideal solution is to manage glare with a RemoteLift hand-held remote control. At the simple touch of a button, shades will open or close to adjust to the changing sunlight in a room.





RemoteLift Radio Frequency (RF) motorized shades provide ultra-quiet operation. The system can operate shades from virtually anywhere in the house without direct line of sight. Similar to how a garage door opener operates, radio signals travel through walls and make it possible to control multiple coverings throghout the home alone or as a group. The RF system is also available in a 5-channel version. The multi-channel RF system allows for independent control of individual shades and/or group control.

RemoteLift motorization systems provide many benefits, such as improving energy efficiency, providing easily controllable privacy and also enhancing home security.



The RemoteLift RF timer allows users to program specific times of the day to automatically adjust shades in different areas of the house, protecting interiors from the fading effects of direct sunlight. This feature provides added security to an unoccupied home by creating a lived in look even while homeowners are away on vacation.



The battery powered RemoteLift RF wireless wall switch allows shades to be controlled when entering or exiting a room, just like the lights. The switch may be seamlessly installed without wiring next to any light switch or stand alone, and is never misplaced. This one touch privacy helps create the ideal environment whether preparing for a bath, relaxing in bed or enjoying time with the family at home.



The Smoove® 1 RTS surface-mounted wall switch avoids cutting into drywall. This single channel, battery-operated solution is easy to install, and doesn't require an electrician. It's an intuitive, surface mount control.



The myLink™ RTS Smartphone and Tablet Interface is a WiFi to Radio Technology Somfy® (RTS) bridge that can control up to 5 channels of RTS motorized products using the Somfy myLink apps for iOS and Android devices. Through the app, users can send immediate RTS commands, create scenes (a group of motorized products working together) and schedules (timed events). Users may access their myLinks from anywhere with the app's remote access feature. Though the myLink is a single-zone controller, multiple myLinks can be joined within the same system for multi-zone control.

RemoteLift motorized shades are powered by Somfy, an industry leader in automated window coverings. All motorized products are backed by a 5 year warranty.



REMOTELIFT™ MOTORIZATION: FEATURES & OPTIONS

RADIO FREQUENCY (RF) MOTORIZATION FEATURES:

- Highest quality patent protected design by Somfy
- Advanced motor, capable of lifting shades up to 12 LBS.
- Quiet operation
- Motor is fully enclosed within the headrail
- Installs with standard installation hardware
- RF motor is programmable

Note: The power source must be selected when ordering. The options are: reloadable single or dual battery wand, and the plug-in transformer.





Radio Frequency (RF) RemoteLift Motor

Motor (Part #1240292) Crown (Part #9018588A) Drive (Part #9018477)

- · Fully concealed motor unit
- Adjustable speed (10-28 rpms)
- · Soft Stop, Soft Start
- · Sleep Mode option available
- · Motor is only available on the right side



Radio Frequency (RF) Remote Control (must order separately)

Color: 2 tone white and gray 2 Types: programmable 1-channel and programmable 5-channel (1-Channel: Part #RC445069)

- (5-Channel: Part #RC445079) (Telis Modulis 5-Channel: Part #1811235) (16-Channel: Part #1811081 – available as a separate part order only)
- · Controls shade operation
- Programmable features
- Easy shade positioning up to 90 feet away
- 5-channel remote allows for multiple and independent shade operation 5-channel remote programming can be done by special request prior to shipping. Contact customer service with your programming instructions otherwise all shades will be programmed on channel 1.



Single Battery Wand (reloadable) and Installation Clips

- · On initial shade orders, the reloadable wand comes with 8 AA lithium batteries
- · Comes with mounting installation clips
- · For parts ordering the reloadable wand INCLUDING 8 AA lithium batteries, order both part #s
- Replacement 8 AA lithium batteries may also be ordered separately



Optional, Dual Battery Wand (reloadable) and Installation Clips (Part #RC445268)

(Clips: Part #9013263) (Y-Harness: Part #9018625) (Y-Harness Ext. Cable: Part #9016374)

- On initial shade orders, the reloadable wands come with 16 AA lithium batteries
- Combines (reloadable) Single Battery Wands for added lifting capacity and/or extended life
- Comes with mounting installation clips



Transformer 10' Cable (Part #1822445)

- Plug-in operation, no batteries required
- · Works in standard wall outlet (10' wire length)



Battery Wand Extension Cables Color: White

- (10" Cable: Part #9018686A) (48" Cable: Part #9016736) (96" Cable: Part #9018624)
- Available in 10", 48" and 96"
- · Allows battery wand installation away from headrail



Wireless Wall Switch

8 AA Lithium Batteries (not shown) (Part #9014834)

Color: white

- 2 Types: programmable 1-channel and 5-channel
- (1 Channel: Part #1810897) (5 Channel: Part #1810813)
- Control wireless operation from the wall up to 90 feet away
- · Works like turning a light on/off



Programmable Timer

1 Type: programmable 1-channel (Part #1805176)

- · Program operation based on pre-set times
- · Excellent home security feature



Smoove 1 RTS - single channel surface mount control Color: Pure

- Battery operated
- · Tactile buttons for UP/DOWN/MY/STOP control
- · LED for visual feedback



myLink Interface Color: White

(Part #1811533)

(Part #1811403)

- · Smartphone and Tablet Interface 120V AC
- · App Control
- · Remote Access
- · Compatible and controls all Radio Technology Somfy RTS products.
- Can control up to 5 channels of RTS motorized products using myLink apps for iOS and android devices.



Photovoltaic Panel

Battery + Battery Tube

"Y" Harness (Part #9018625)

(Part #9018621)

- · Uses sunlight to power a motorized shade.
- Easy to install. Low profile, easy to conceal.
- Solar Recharge Kit (batteries NOT included) (Part #9019034) Includes solar panel, 10" Y harness, 12v reloadable battery tube, tube mounting clips, glass mount adhesive tape, solar panel mounting brackets - 4 gty.)
- NiMh Rechargeable Batteries (quantity of 10) (Part #9018621)
- Plug-in AC Battery Rapid Charger (for solar recharge kit only) (includes 12" cable) (Part #9018620)
- 48" Extension Cable for Y Harness (Part #9016736)

Accessories

Plug-in AC battery (Part #9018620) rapid charger (required for charging battery prior to installation)



REMOTELIFT™ ROLL-UP 28 WIREFREE™ RTS QUICK PROGRAMMING GUIDE

BEFORE YOU BEGIN: Check if you have a paired remote with the following directions:

- 1) Supply power to the motor by connecting the power source to the power cable on the motor.
- 2) If a remote was ordered, press a directional button (UP or DOWN) and see if the shade operates. If a multi-channel remote was ordered, select the channel the shade should be programmed under then operate the shade. a) If the shade operates - the shade is already programmed.
- b) If the shade does not operate choose the channel on which you would like to control the shade. PRESS & HOLD the PROGRAMMING BUTTON on the motor until it jogs once. Then BRIEFLY PRESS the PROGRAMMING BUTTON on the remote. The shade will jog once. The shade is now programmed.

NOTE: Upper and lower limits are set at the factory. In the event limit setting is required, please follow steps under Initial Programming and Limit Setting.



INITIAL PROGRAMMING AND LIMIT SETTING

NOTE: Motor will exit programming mode after 2 minutes of inactivity. While in **programming** mode, the shade only operates when UP or DOWN buttons are continuously pressed.

Step 1: To initiate programming **PRESS** & HOLD the UP and DOWN buttons at the same time until the shade jogs.



Step 2: Check the direction of operation. Press the **DOWN** button and confirm the shade lowers.



If the shade raises instead of closing, change the direction - PRESS & HOLD the MY/ **STOP** button until the shade jogs. Confirm correct direction of operation before proceeding.













Step 3: Bring the shade to your desired upper limit. PRESS & HOLD both the MY/STOP and **DOWN** buttons until the shade begins to move down, then release. Stop the shade at the desired lower limit, adjust by pressing the UP or DOWN.

Step 4: PRESS & HOLD the UP and MY/STOP buttons until the shade begins to move up. The shade will stop at the original upper limit. Adjust if necessary.















Step 5: PRESS & HOLD the MY/STOP button until the shade jogs to confirm both limit settings.

Step 6: To finalize BRIEFLY PRESS the PROGRAMMING **BUTTON** on the back of the control. The shade will jog and will now operate in **user mode**. A brief press of the UP or DOWN button will send the shade to the respective limit.





ADJUSTING THE LIMITS IN USER MODE

UPPER LIMIT

LOWER LIMIT

Step 1: Move the shade to the current limit position you wish to adjust and let it stop.









Step 2: PRESS & HOLD both UP and DOWN buttons simultaneously until the shade jogs, then release.









Step 3: Adjust to a new limit position using the UP or **DOWN** buttons





Step 4: PRESS & HOLD the MY/STOP button until the shade jogs, then release. Check the new limit.









REMOTELIFT™ ROLL-UP 28 WIREFREE™ RTS QUICK PROGRAMMING GUIDE

0R

ADD OR DELETE A CONTROL

a) PRESS & HOLD the PROGRAMMING BUTTON on the back of Control 1 until the shade jogs.





CONTROL 1: Previously programmed control - single channel or the channel (1-5) of a multichannel remote.

b) BRIEFLY PRESS the PROGRAMMING BUTTON on the back of Control 2. The shade jogs.





CONTROL 2: Second control to be added or deleted - single channel or the channel (1-5) of a multichannel remote.

The procedure to delete an RTS sensor is the same.

ENABLING SLEEP MODE



STOP The shade must be programmed.



This feature temporarily prevents the motor from responding to any previously programmed remote commands.

1) PRESS & HOLD the motor head **PROGRAMMING BUTTON** until the shade jogs.











DISABLING SLEEP MODE

3) Press the motor head PROGRAMMING BUTTON.

The shade jogs and the remote commands are enabled.





NOTE: If step 3 is not performed, Sleep Mode will automatically disable after approximately 10 minutes.

RESETTING THE MOTOR TO FACTORY MODE

PRESS & HOLD the PROGRAMMING BUTTON on the motor (shown below) for approximately 12 seconds during which the shade will jog 3 separate times.



rogramming . Button



All programmed remotes and limit settings will be erased. Motor is now reset to **factory mode**. Motor limits will need to be re-established.

SETTING INTERMEDIATE "MY" POSITION

1) Move the shade to the desired position and press MY/STOP button to stop the shade.





2) PRESS & HOLD the MY/STOP

favorite position is set.

button until the shade jogs. The "my"



3) To set a NEW "my" position, repeat steps 1 and 2.

To delete: First send the shade to the current "my" position, then PRESS & HOLD the MY/STOP button for 5 seconds. The shade will jog to confirm deletion.

USING THE INTERMEDIATE "MY" POSITION

While the shade is stationary, a simple press of the MY/STOP button will move the shade to the "my" intermediate position from any shade position.





If the shade is in motion, first stop it by pressing MY/STOP and then MY/STOP again to send it to the "my" position.













ADJUSTING THE SPEED

LED blinks alternately in green and yello during the adjustment.

1) Move the shade away from the end limits. PRESS & HOLD the UP, MY/STOP and DOWN buttons simultaneously, until the shade jogs. The shade will move up and down automatically in ten second cycles.



button until the shade jogs.











2) To increase the speed, PRESS & HOLD the UP button until the shade jogs. Repeat as needed.



Maximum speed is achieved when the shade no longer jogs when the UP button is pressed.

3) To decrease the speed, PRESS & HOLD the DOWN button until the shade jogs. Repeat as needed.






longer jogs when the DOWN button is pressed. 4) To confirm the new speed, PRESS & HOLD the MY/STOP

Minimum speed is achieved when the shade no






PRODUCT COMPONENTS - STANDARD

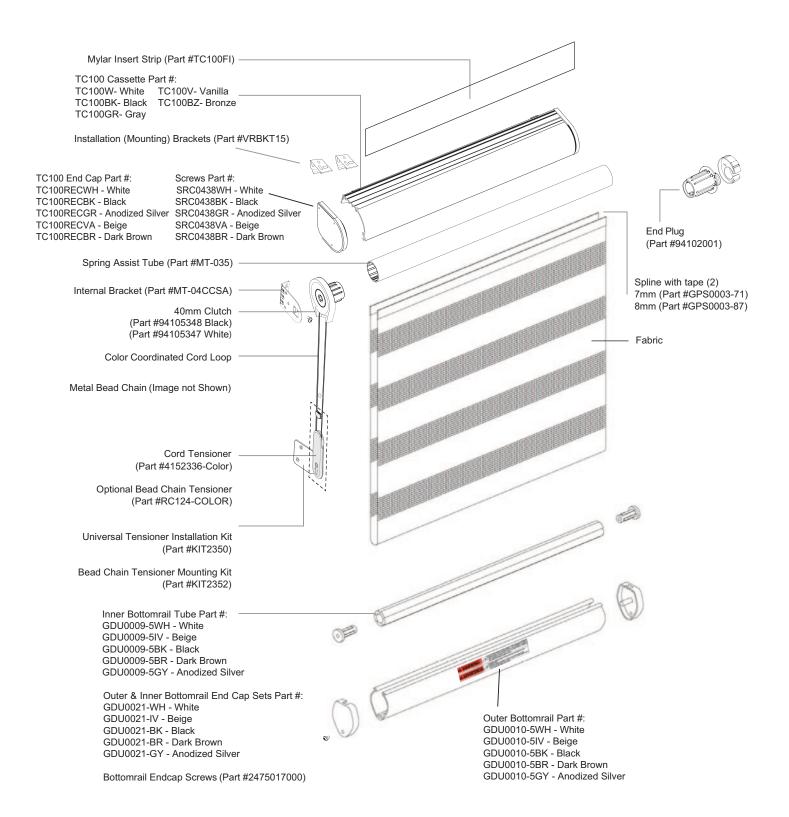

PRODUCT COMPONENTS - SIMPLICITY RECHARGEABLE MOTORIZATION

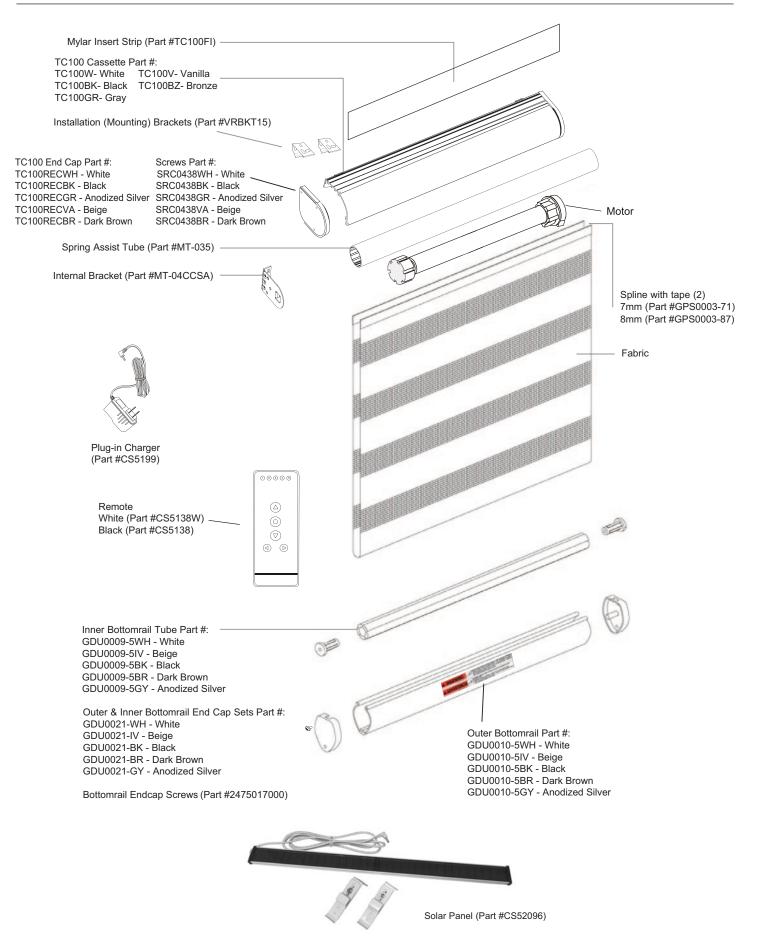

PRODUCT COMPONENTS - POWERWAND MOTORIZATION

